

How to upgrade software version of Logosease (Mac)

Ver1.2.2

Please prepare following items before upgrading

1. Logosease to be upgraded

2. Mac PC 1 set

PC requirement

Supported OS: Since macOS 10.10

*We have confirmed the operation with

MacBook Air (Intel) : MacOS 10.13.6、10.14.6、10.15.6、11.2.3、

MacBook Air (M1) : MacOS 11.2.2.

*Please close other application before start upgrading.

3. Logosease battery charger x1

4. Logosease accompanying USB cable x1

5. USB hub x1

《Applicable USB hub for upgrade》

Makers	Series	Model
ELECOM	U2H-SN4BF2 series	U2H-SN4BF2WH

*We have confirmed that above units are applicable. However, it is not guaranteed.

Upgrading Software Procedure (Mac)

1. Please connect items in the following process.

Mac PC — USB hub — Accompanied USB cable — Battery charger

***Do not set a Logosease on the battery charger at this timing.**



***You must use USB-hub in upgrading. If you do not, PC can not recognize the unit correctly.**

***Upgrading more than one unit of Logosease at the same time may cause malfunction. Please connect one unit of Logosease to one PC.**

2. Download the software upgrading program from My Page in Logosease special website, then double click on "lgsgup_XX.dmg".



lgsgup_1.0.dmg


3. Drag “lgsgup.app” and drop on “Applications”.




When “lgsgup.app” is successfully installed, then double click it to start “LGSRGUP”



4. Click [file]=>[Open...] on menu bar,

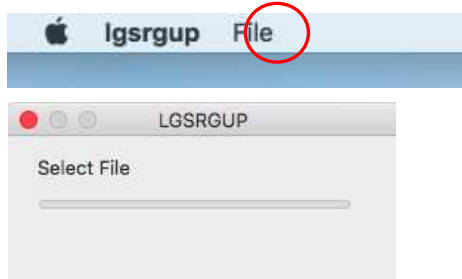

Then choose the upgrading program (V201***.rgu) from downloaded folder and click “Open”

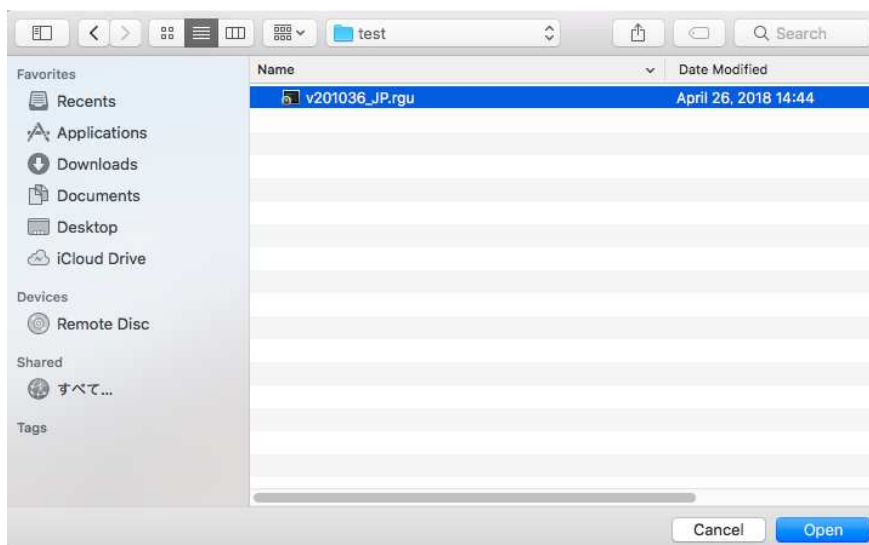


*If wrong file was chosen, “Invalid File.(xx)” message will be shown. Please choose correct upgrading program.

5. When correct upgrading program is chosen, file version will be shown, click “OK” to confirm.



Once this window as below is shown, set Logosease on the battery charger.

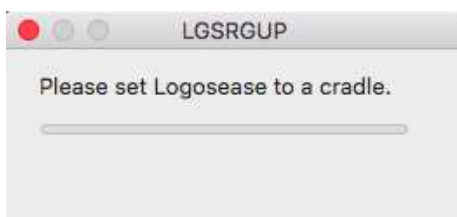


6. When you set Logosease on battery charger, confirmation of current version will be shown.
Click “OK” to continue upgrading.




*Software version to be shown could be an old version.

* Once you set Logosease on the battery charger, click “OK” within 1 minute.


7. Software upgrading will be run.

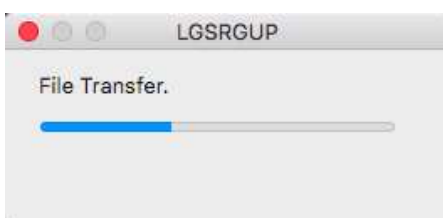


*In case of RG004, if “Disk Not Ejected Properly” is shown while updating, then click “Close”.

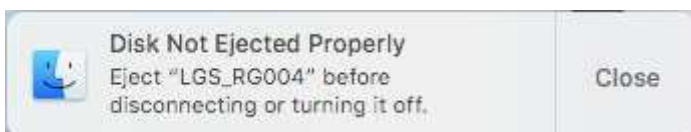

8. Once upgrading is finished, the updated software version will be shown. Please confirm that it is updated as you wished, then click [OK].

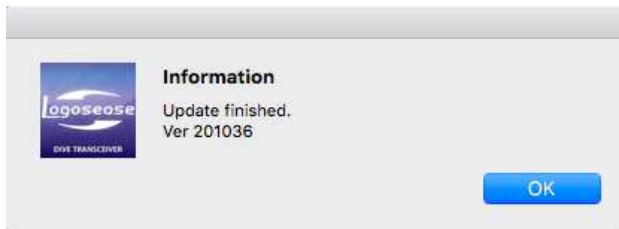

9. Remove Logosease from battery charger.

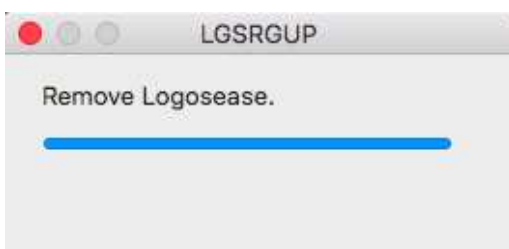


Version upgrading is done.


*In case of RG 004, either through its icon into the trash can,



 or, click red circled part on the finder before remove Logosease from battery charger.



- * Repeat steps 5-9 to write the same software to another device.
- * In step 8, if wrong version is shown, please repeat step5-9 to
If the displayed software version is wrong in step 8, try to upgrade again by following steps 5-9.
- * If the following message is shown, the upgrade has failed. Your Mac OS version may not be supported.

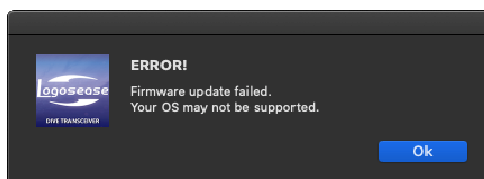

End.