

## How to upgrade software version of Logosease (Windows)

Ver.1.77

**Please prepare following items before upgrading.**

1. Logosease to be upgraded

2. Windows PC 1set

PC requirement

Supported OS :

Windows 10      Windows8      Windows7 SP1 64bit

Windows Vista      Windows XP SP3 32bit

\*We have confirmed operation with above OS, although we do not guarantee.

\*Please close other application before start upgrading.

\*Use HID standard device. please enable it.

3.Logosease battery charger x1

4.Loogsease accompanying USB cable x1

5.USB hub x1

### 《Applicable USB hub for upgrade》

Makers	Series	Model
BAFFALO	BSH4U06 series	BSH4U06
	BSH4A01 series	BSH4A01
ELECOM	U2H-Z7 series	U2H-Z7SBK
	U2H-TZ4 series	U2H-TZ410BSV

\*We have confirmed that above device are applicable. However, it is not guaranteed.

---

## Upgrading Software Procedure (Windows)

1. Please connect items in the following process.

Windows PC — USB hub — Accompanied USB cable — Battery charger

**\*Do not set a Logosease on the battery charger at this timing.**



**\*You must use USB-hub in upgrading. If you do not, PC cannot recognize the unit correctly.**

**\*Upgrading more than one unit of Logosease at the same time may cause malfunction. Please connect one unit of Logosease to one PC.**

2. Download the software upgrading program (compressed file) from My Page in Logosease special website.


Then save it in any folder. (on the desk top is recommended)

**\*You can delete old upgrading software.**


3. Decompress the program in any folder(on the desk top is recommended), and double click"lgsugrg.exe" to activate LGSRGUP.

**\*Make sure to use the latest downloaded version of LGSRGUP**

4. In the menu, click file [file]→[open]

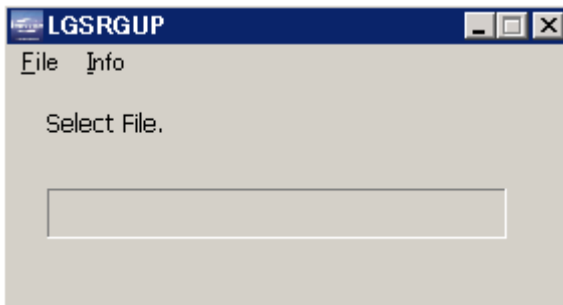

 Choose the downloaded software upgrade program (V201\*\*\*.rgu) from the folder you choose (on the desk top is recommended), then click "open"

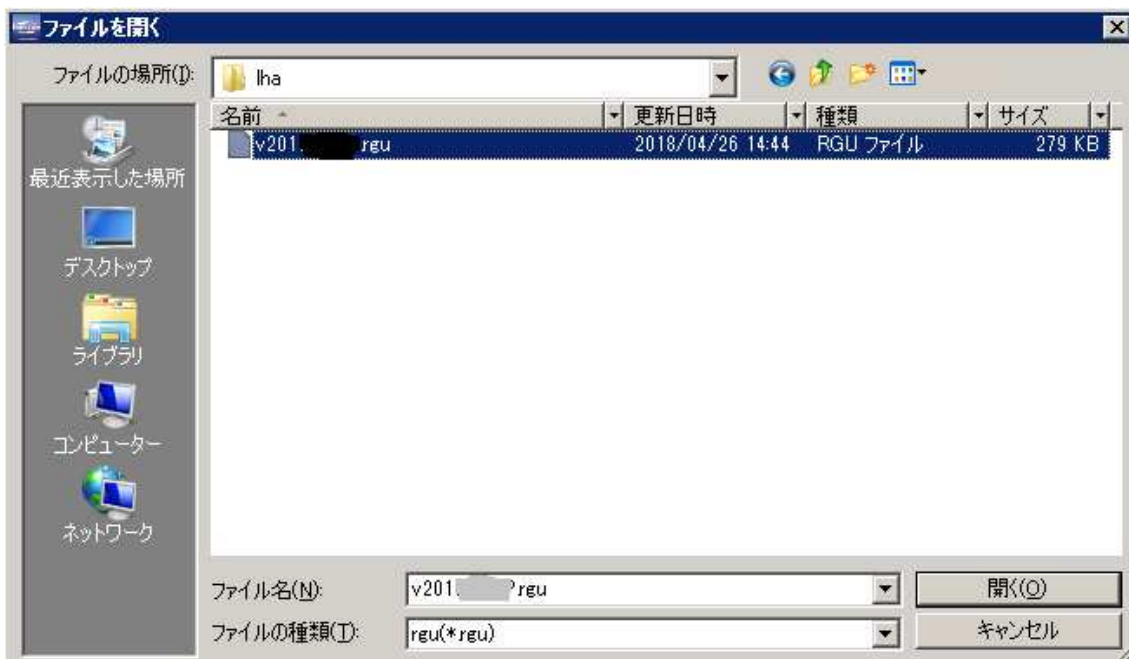


\*If wrong file was chosen, "Invalid File.(xx)" message will be shown. Please choose correct upgrading program.



 5. When correct upgrading program is chosen, file version will be shown, click "OK" to confirm.

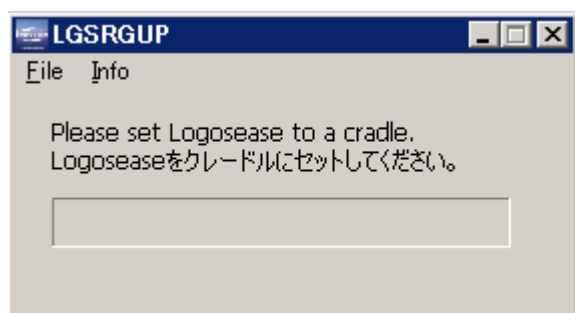

Once this window as below is shown, set Logosease on the battery charger.



6. When you set Logosease on battery charger, confirmation of current version will be shown.  
Click "OK" to continue upgrading.

\*Please confirm that   these icons appeared in the task tray. However, it may not be appeared, then proceed to the next.

6. When you set Logosease on battery charger, confirmation of current version will be shown.  
Click "OK" to continue upgrading.



\*Software version to be shown could be an old version.

\* Once you set Logosease on the battery charger, click "OK" within 1 minute.

7. Software upgrading will be run.




\*It will take a while to complete the upgrading. Do not remove Logosease from battery charger.

8. Once upgrading is finished, the updated software version will be shown. Please confirm that it is updated as you wished, then click [OK].



9. Remove Logosease from battery charger.

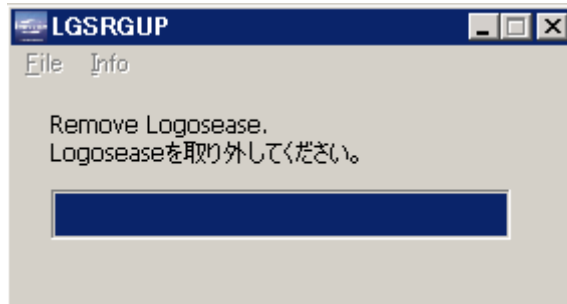

Version upgrading is done.


\* Repeat steps 5-9 to write the same software to another device.

\* In step 8, if wrong version is shown, please repeat step 5-9 to

If the displayed software version is wrong in step 8, try to upgrade again by following steps 5-9.

\* If it does not progress for a while, remove Logosease from the battery charger and close the

upgrade tool, then repeat from step3.

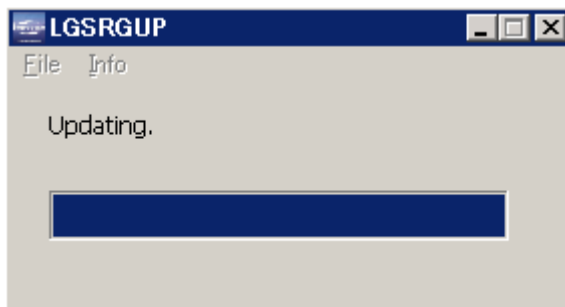

\*You may be asked to install the Windows driver after upgrading. This may cause the update to fail. In this case, please update again after completing the driver installation.

End.